


SLIDE BOLT FITTING INSTRUCTIONS

The slide bar and staples should be fitted as shown in the diagram:

1. Attach a staple to the door frame. Use a 4mm drill bit for pilot holes and the screws provided.

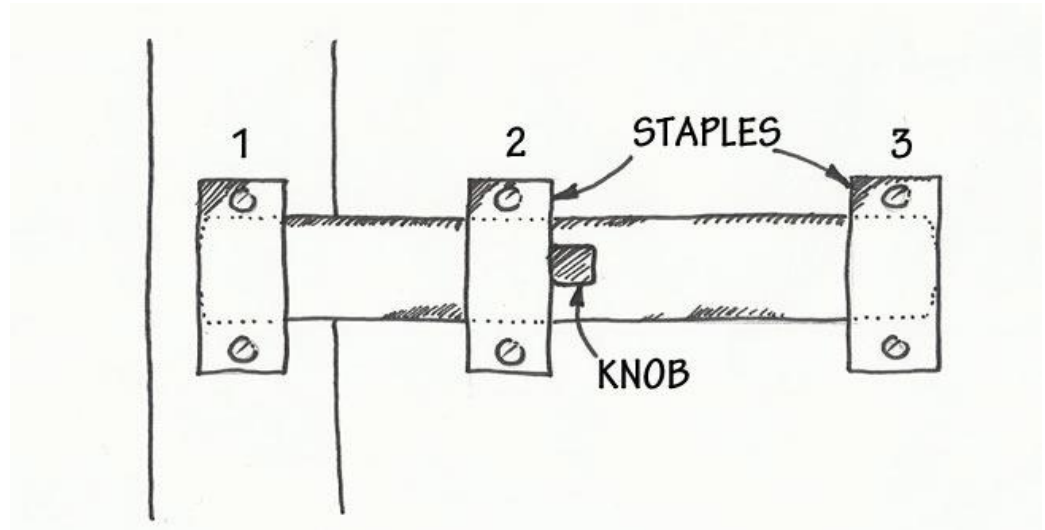

2. Insert the slide bar and position a second staple onto the door so that it is to the left of and tight against the slide bolt knob. Attach.
3. Attach the final staple to the door at the other end of the slide bar.